



## NX MASTER CONTROLLER

### FOLIO 1

### FOR REVERSING AND DYNAMIC BRAKING CONTROL

NOTE—Spare part information for Face Plates not shown on Page 2 will be furnished upon receipt of Serial Numbers of Master Controllers

Item No.	List No.	DESCRIPTION	Item No.	List No.	DESCRIPTION
1	NX-21A	Face Plate, Complete (3 Point Reversing), See Note.....	†19	NX-73A	Finger Connector.....
2	NX-72A	Face Plate, Complete (3 Point Dynamic Braking HW Hoist), See Note..... Note: For all other contact arrangements advise Serial No. of Master Controller.	20	NT-560	Dead Block Insert, brass, $\frac{51}{64}$ " long.....
3	NX-57	Face Plate, impregnated asbestos wood, for Items 1 & 2 only.....	21	NT-710	Dead Block Insert, brass, $\frac{39}{64}$ " long.....
4	NX-64	Dead Block, fibre.....	22	FP-24H10	Ball Bearing.....
†5	NX-58	Contact, copper.....	23	NX-33	Shaft, steel.....
†6	NX-62	Contact, copper.....	24	NX-67	Key, steel.....
7	NT-71	Contact Screw, steel.....	25	NX-41	Bearing Retainer, steel.....
†8	NX-59	Contact, copper.....	26	NX-167	Clip, 3 used on Frame for Weather Proof Cover
†9	NX-60	Contact, copper.....	27	ZS-1132	Spl. Cap Screw, $\frac{1}{4}$ " x 1" slotted head.....
10	NX-65	Dead Block, fibre.....	28	NT-24	Stop Stud, steel, attached to Frame.....
†11	NX-63	Contact, copper.....	29	NT-73	Terminal, steel.....
†12	NX-61	Contact, copper.....	30	NX-31	Roller Bracket, brass.....
†13	NX-60	Contact, copper.....	31	NX-69	Roller, steel.....
14	NX-68	Finger Pin, steel.....	32	NX-44	Roller Pin, steel.....
†15	NT-75	Finger Spring, music wire.....	33	NX-40	Roller Bracket Pin, steel.....
†16	NT-18A	Contact Finger, brass.....	†34	NX-70	Spring, steel, for Roller Bracket.....
17	NX-17A	Contact Arm, Complete with Fingers.....	35		Rail, C. I. Advise Serial Number of Master...
18	NX-32A	Contact Arm, bakelite, with inserts, as shown..	36	NT-95	Handle Stud, steel.....
			37	NT-1333	Ball Handle (Formerly No. 392).....
			38	NX-13A	Operating Lever, complete, without lock.....
			39	NX-14A	Operating Lever, complete, with lock.....

#### FOLLOWING PARTS FOR SPRING RETURN OPERATION

40	NX-15A	Operating Lever, complete, without lock, for Spring Return.....	54	NX-207	Special Stop, steel.....
41	NX-16A	Operating Lever, complete, with lock, for Spring Return.....	55	NX-81	Spring Rod, brass.....
42	NX-20A	Roller Support, Complete with Rollers.....	56	BO-160	Washer, $\frac{1}{8}$ " brass, $\frac{1}{8}$ " O. D.....
43	NX-180A	Roller Support, Complete with Rollers, for Spring Return to first point R. H. side and off to L. H. side.....	57	NT-67	Washer, $\frac{1}{8}$ " steel, $1\frac{1}{2}$ " O. D.....
44	NX-45	Roller Support, without Rollers.....	58	ZCX-57	Spl. Cap Screw, slotted, $\frac{1}{4}$ -20x $\frac{3}{4}$ ".....
45	NT-178	Roller Pin, $\frac{3}{8}$ " steel.....	59	NX-82	Spring Retainer Pin, steel.....
46	NT-179	Roller, steel, $\frac{7}{8}$ " O. D.....	60	NX-78	Spring Rod Pin, steel.....
47	NX-181	Roller Pin, steel.....	†61	NX-84	Spring, steel, $2\frac{3}{8}$ " long.....
48	NX-47	Lock Bushing, steel.....	†62	NT-181	Spring, steel, $\frac{3}{4}$ " I. D.....
49	NX-48	Lock Pin, steel.....	†63	NX-177	Spring, steel, $1\frac{3}{16}$ " I. D.....
50	NT-92	Lock Cap, steel.....	64	P-22	Washer, $\frac{1}{8}$ " steel, $1\frac{1}{4}$ " O. D.....
51	NX-71	Lock Spring, music wire.....	65	NT-172	Lever, $\frac{3}{16}$ " steel, as shown.....
52	NX-83	Adjusting Nut, brass, for Spring Return to first point, both sides.....	66	NX-206A	Lever, $\frac{3}{16}$ " steel, including dotted part.....
53	NX-80	Spring Retainer, C. I., for Spring Return to first point, both sides.....	67	NT-173	Lever, $\frac{3}{16}$ " steel.....
			68	NT-163A	Spring Return Plate, complete (standard).....
			69	NX-182A	Spring Return Plate, complete (first point R. H. side and to off L. H. side).....
			70	NT-175	Lever Pin, steel.....
			71	NX-79	Mounting Plate, C. I.....

†Essential Parts for General Maintenance.

ADVISE NAME PLATE MARKING WHEN ORDERING PARTS

TYPE NX MASTER CONTROLLER  
FOLIO 1

